

UPLOADING MENUS

BULLET



Step 1:

Unplug the oven. Remove the right side oven panel by unscrewing the four #2 Phillips head screws.

Step 2: Download both the .TGZ and .BIN menu files from your operations website.

NOTE: Before continuing to Step 2, confirm that the name of the menu files does NOT contain parentheses () or spaces. If the menu file contains parentheses or spaces, remove them.

Step 3: Transfer both menu files to the root of a 32gb or less (SanDisk or Kingston preferred) flash drive.

NOTE: The flash drive MUST be completely empty of all other files or folders. If files or folders other than the .TGZ and .BIN are present on the flash drive, the oven may not recognize the flash drive.

Step 4: Safely eject the USB from your PC.

Step 5: Turn your oven off.

Step 6: Insert the USB.

Step 7: When prompted, follow the on-screen instructions.

Troubleshooting

If you experience any issues while loading the menu to your oven, please reformat your flash drive. Retry the above steps starting with Step 1. If you are still experiencing issues, please reach out to support.

Global Operations

2801 Trade Center, Carrollton, TX 75007 USA
+1 214-379-6000 | turbochef.com

Customer Service

1.800.90TURBO | CSR@turbochef.com