

### IMPORTANT:

The image must be saved as a **.bmp** file with an aspect ratio of **5:4**, and image dimensions of **104 x 83 pixels**. If these specifications are not followed, the image will not work. Landscape orientation is preferred over portrait. You can adjust these settings during the editing process using this step-by-step guide.

**Note:** This guide uses the built-in Windows editing tool, which doesn't require third-party downloads. Other editing software may work, but this guide is specific to Windows.


### You'll Need:

- The **RecipePics** folder, which is provided in the software update
- A **formatted USB drive**
- A **Windows** operating system


---

## Step-by-Step Guide

Open your Pictures folder, choose the image you want to add, and double-click it to open it in the editing tool. The image will appear in the program.

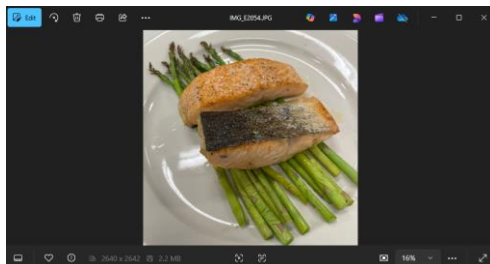

If the image is in the wrong orientation, press the **rotate icon** to adjust it.

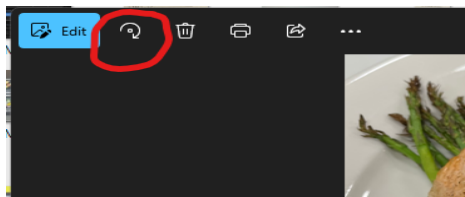

### Global Operations




2801 Trade Center, Carrollton, TX 75007 USA  
+1 214-379-6000 | [turbochef.com](http://turbochef.com)

### Customer Service

1.800.90TURBO | [CSR@turbochef.com](mailto:CSR@turbochef.com)

## Adding Your Own Pictures to CIBO+

Press the **Blue EDIT icon** to open the cropping screen. Crop the image to fit a **5:4 landscape** ratio.

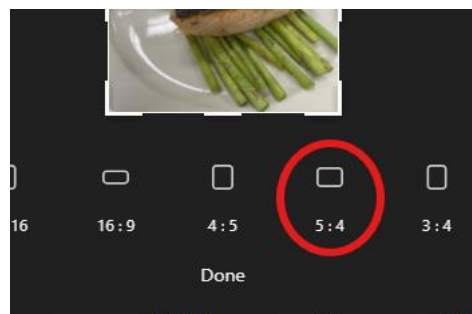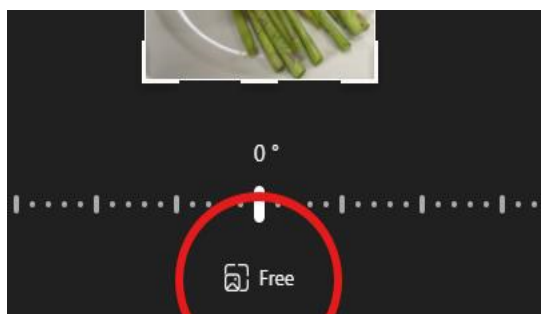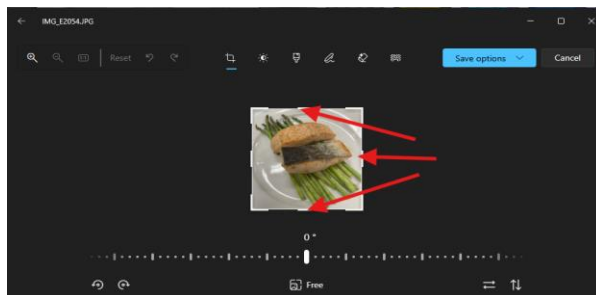

Click **Save as copy**. Choose to save it on your **Desktop**. Rename the file to match the product description and ensure it is saved as a **.bmp** file.


### Global Operations

2801 Trade Center, Carrollton, TX 75007 USA  
+1 214-379-6000 | [turbochef.com](http://turbochef.com)


### Customer Service

1.800.90TURBO | [CSR@turbochef.com](mailto:CSR@turbochef.com)

## Adding Your Own Pictures to CIBO+

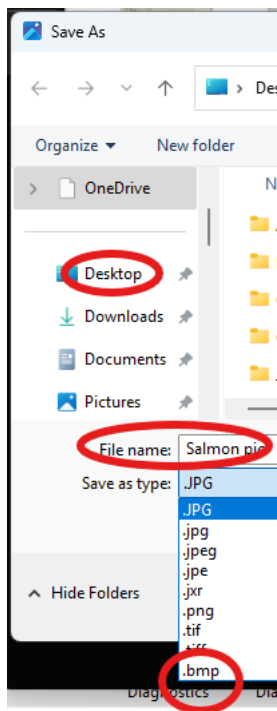

After clicking **Save**, the image will reopen. Right-click on the image, select **Resize Image**, and a new window will appear.

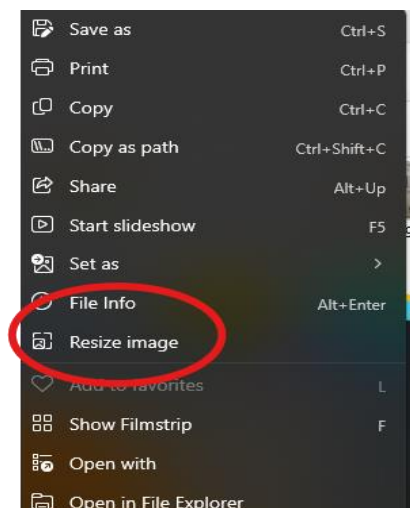

In the **Resize Image** window, change the width to **104**. The height will automatically adjust to **83** based on the aspect ratio. Click **Save**. If prompted to overwrite the existing file name (unless changed), click **Accept** to save it.



### Global Operations

2801 Trade Center, Carrollton, TX 75007 USA  
+1 214-379-6000 | [turbochef.com](http://turbochef.com)


### Customer Service

1.800.90TURBO | [CSR@turbochef.com](mailto:CSR@turbochef.com)

## Adding Your Own Pictures to CIBO+

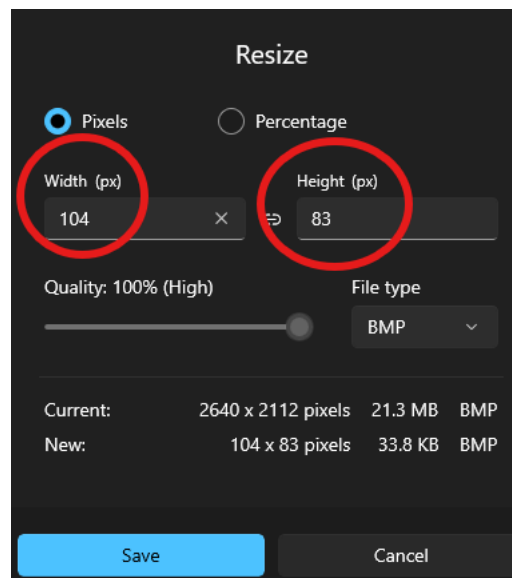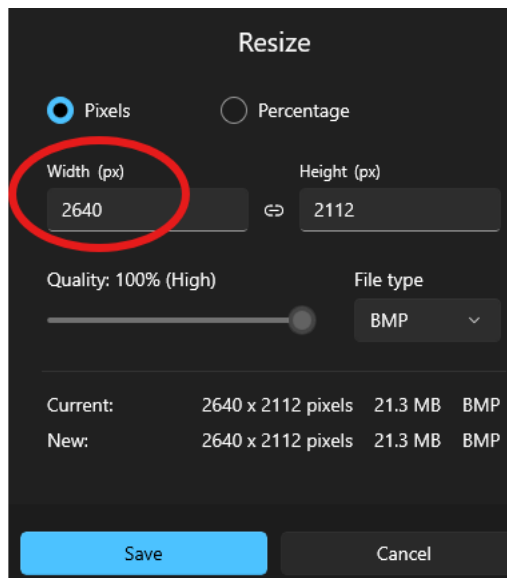

Insert the TurboChef USB drive into your computer's USB port. When the window opens, locate and open the **RecipePics** folder. It should display 80 pictures.

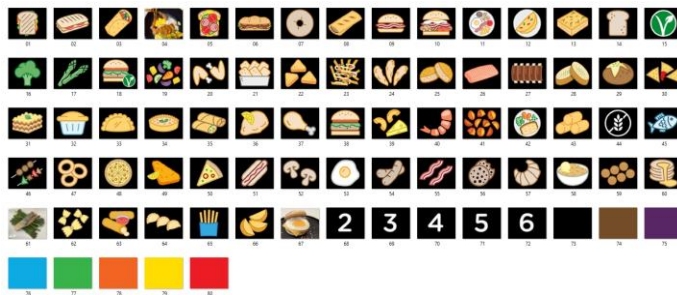

Rename the newly saved product image to overwrite one of the 80 images (maximum of 80). The filename must be a two-digit number between **1** and **80**, with no spaces or extra characters.

For example, rename the image to **75** (the purple square). Right-click the purple square, select **Delete**, and confirm by clicking **Yes**.


### Global Operations

2801 Trade Center, Carrollton, TX 75007 USA  
+1 214-379-6000 | [turbochef.com](http://turbochef.com)


### Customer Service

1.800.90TURBO | [CSR@turbochef.com](mailto:CSR@turbochef.com)

## Adding Your Own Pictures to CIBO+

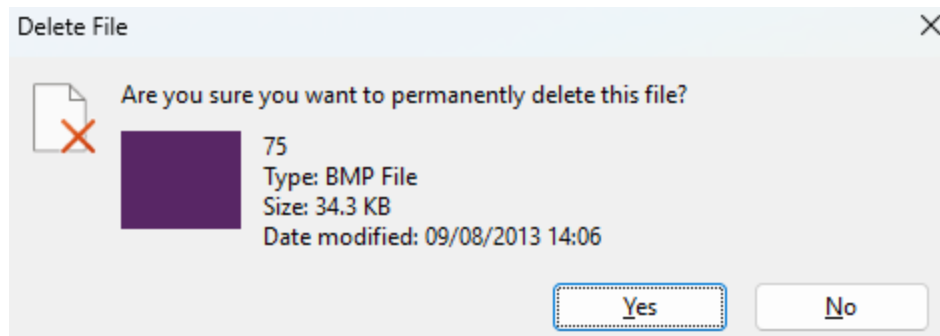

Now drag and drop the newly changed salmon image (now 75) into the RecipePics folder we have open on the USB drive.

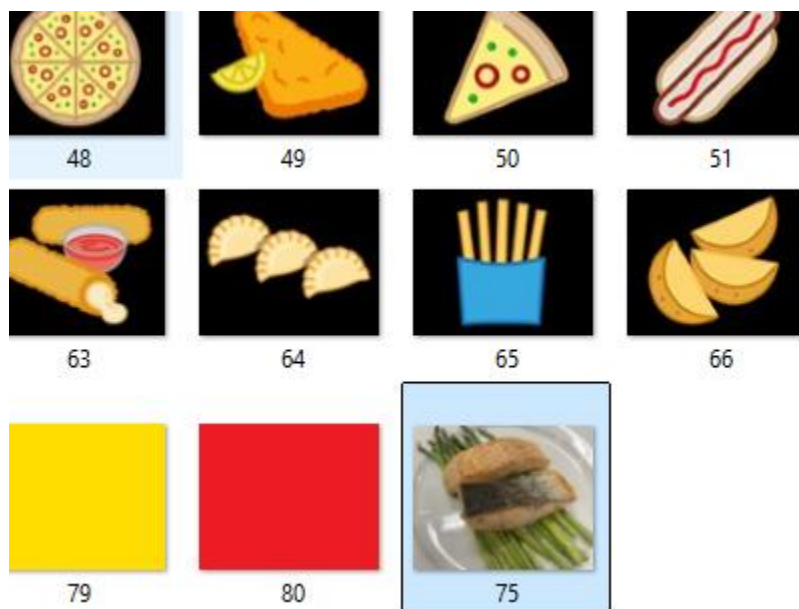

Repeat this process if you wish to add more images to the folder, choosing a different number each time, to remove and replace with your images.

Once you have all your images done. Close the window.

Remove the USB stick and insert it into the oven where you want to upload the picture(s).

---

## Uploading Images onto CIBO+

### Global Operations

2801 Trade Center, Carrollton, TX 75007 USA  
+1 214-379-6000 | [turbochef.com](mailto:CSR@turbochef.com)

### Customer Service

1.800.90TURBO | [CSR@turbochef.com](mailto:CSR@turbochef.com)

## Adding Your Own Pictures to CIBO+

### 1. **Power on the Oven**

Ensure the oven is switched on at the mains. Press and hold the power button until the oven beeps. It will complete the boot-up sequence and show the main screen.

### 2. **Insert USB Stick**

Remove the lower front black filter, unscrew the USB port protection cap, and insert your RecipePics USB stick. The oven will beep once to confirm recognition.

### 3. **Navigate to Settings**

From the main menu, tap the **Chef's Hat** icon, then the **Gear Icon**.

### 4. **Access Software & Data**

Tap **Software & Data**, then select **Images & Themes**.

### 5. **Upload Recipe Pictures**

Tap **Upload Recipe Pictures**. The transfer will take about 1 minute, and the screen will display "OK."

### 6. **Confirm Upload**

Tap **OK** to confirm the upload.

### 7. **Return to Home Screen**

Press the **House Icon** to return to the home screen.

### 8. **Add Picture to Recipe**

To add the picture to your recipe, press the **Chef's Hat** icon, then select your cooking program.

### 9. **Select the Image**

Tap the picture displayed in the top right corner. Scroll through the picture gallery until you find your newly uploaded image. (I renamed mine "75," so it will appear on page 10.)

### 10. **Save the Picture**

Tap your image to select it, and it will appear in your recipe. Press the **Save Icon**.

### 11. **Return to Home Screen**

Press the **House Icon** to return to the main screen.

### 12. **Check the Recipe**

Verify that your recipe now displays the new picture.

#### Global Operations

2801 Trade Center, Carrollton, TX 75007 USA  
+1 214-379-6000 | [turbochef.com](http://turbochef.com)

#### Customer Service

1.800.90TURBO | [CSR@turbochef.com](mailto:CSR@turbochef.com)